

A2 Flight Control System

User Manual v 1.10

2013.10.25 Revision

For Firmware V2.0 & Assistant Software V1.1 & DJI Assistant App V1.1.12

Thank you for purchasing DJI products. Please strictly follow these steps to mount and connect this system on your aircraft, install the PC Assistant Software on your computer, as well as installing the DJI Assistant App on your mobile device.

Please regularly check the web page of corresponding products on our website www.dji.com, which is updated regularly. Product information, technical updates and manual corrections will be available on this website. Due to unforeseen changes or product upgrades, the information contained in this manual is subject to change without notice.

* This manual is for basic assembly and configuration; you can obtain more details and advanced instructions when using the Assistant Software. To assure you have the latest information, please visit our website and download the latest manual and current software version.

If you have any problems that you cannot solve during usage, please contact your authorized dealer.

Content

INTRODUCTION	3
PRODUCT INTRODUCTION	3
IN THE BOX	3
EQUIPMENT PREPARED BY USERS	3
SYSTEM INTRODUCTION.....	4
SYMBOL INSTRUCTION	4
1 ASSEMBLY AND CONFIGURATION	5
1.1 HARDWARE INSTALLATION AND CONNECTION	5
1.1.1 <i>Mixer Type Supported</i>	5
1.1.2 <i>Hardware Connection Diagram</i>	6
1.1.3 <i>Important for Assembly and Connection</i>	6
1.2 SOFTWARE INSTALLATION AND CONFIGURATION	14
1.2.1 <i>Install Driver and Assistant Software</i>	14
1.2.2 <i>Configure using Assistant Software on a PC</i>	14
1.2.3 <i>Configure the control mode switch</i>	15
1.2.4 <i>Configuration Checking</i>	17
1.3 COMPASS CALIBRATION	18
2 BASIC FLYING	19
2.1 CONTROL MODE INSTRUCTION	19
2.2 FLYING ENVIRONMENT REQUIREMENTS	20
2.3 CHECK LIST BEFORE FLYING.....	20
2.4 POWER ON AND CHECK	21
2.5 START MOTORS METHODS.....	21
2.6 BASIC FLYING TEST	22
3 PROTECTION FUNCTIONS SETTING	24
3.1 FAILSAFE	24
3.2 LOW VOLTAGE PROTECTION.....	25
4 ADVANCED FUNCTIONS	26
4.1 IOC (INTELLIGENT ORIENTATION CONTROL) FUNCTION	26
4.2 GIMBAL FUNCTION	29
4.3 GEAR FUNCTION	29
4.4 ATTITUDE CONTROL WHEN ONE MOTOR OUTPUT FAILS.....	29
4.5 DJI ASSISTANT APP USAGE.....	30
APPENDIX.....	32
LED INDICATOR DESCRIPTIONS	32
SPECIFICATIONS	33
FAQ	34
USE WITH OTHER DJI PRODUCTS	34
CHANNEL MAPPING INSTRUCTIONS FOR PC ASSISTANT SOFTWARE	36
RECOMMENDED MAPPING FOR FUTABA TRANSMITTER (MODE 2) USER.....	37
SETTINGS OF GAIN VALUES FOR YOUR REFERENCE	38
THE TRANSMITTER SETUP OF FUTABA.....	38
DISCLAIMER	39
TRADEMARK	39






Introduction

Product Introduction



The DJI A2 Multi-Rotor stabilization controller is a complete flight system for various multi-rotor platforms for commercial and industrial AP applications. Based on the technology and design philosophy of DJI’s Ace series of high-performance controllers, the A2 offers you a brand new flight experience. Its flight mode setup provides a seamless transition for current Ace One, WKM AP professionals. The system has the following features:

- (1) It is integrated with high-precision sensor components and a high-performance GPS Receiver.
- (2) It utilizes high quality components precisely calibrated with temperature compensation in all gyros and sensors, industry renowned flight algorithm in autopilot and UAV field.
- (3) Designed with built-in vibration absorption, no extra mount frame or vibration absorption pad is required.
- (4) Based on the DESST technology, it has a built-in 16-channel Receiver, and supports DSM2 satellite receiver.
- (5) Optional DJI D-BUS Adapter can be used with a traditional Receiver.

In the Box

Controller Unit (Built-in Receiver DR16)	PMU(Power Management unit)	IMU(Inertia Measurement Unit)
		
LED-BT-I	GPS-COMPASS PRO	Accessories
		Micro-USB Cable (1) Servo Cables (2) GPS Bracket Double side sticky pads.


Equipment Prepared by Users

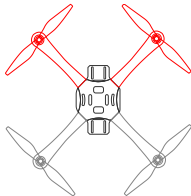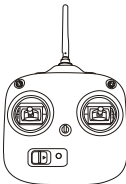Aircraft (Take Quad-rotor for example: Red is nose, and Black is rear)	Transmitter (Take Mode2 for example)	Others
		Battery DJI D-BUS Adapter Mobile Device

System Introduction

The A2 flight control system uses the Control Unit at its core, which is connected with the IMU, GPS-COMPASS PRO、LED-BT-I、 PMU and ESCs to complete the system. The system can achieve the height-lock and position-lock functions by using the IMU and the GPS, to control the aircraft.

Please carry out the following procedures to finish assembly, configuration and flight-testing.

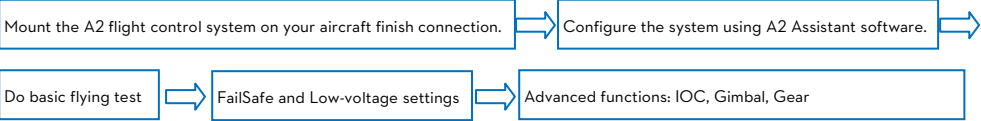

Symbol Instruction

General Symbol

	Forbidden(Important)		Cautions		Tips		Reference
	GPS Satellite number		Distance		TX signal good		TX signal lost
	Roll to left		Roll to right		Pitch up		Pitch down

LED Symbol

	N=1	N=2	N=3	N=4	N=6	N=20	N=∞
Meaning	One Blink	Two Blinks	Three Blinks	Four Blinks	Six Blinks	Twenty Blinks	Continuous Blinks

e.g. (3) means three Red blinks.

(∞)LED blinks yellow and green alternatively.

	N=∞
Meaning	Continuous Solid on

e.g. (∞) means Continuous Blue Solid on.

1 Assembly and Configuration


For hardware installation, software configuration and compass calibration please adhere to the following sections.

1.1 Hardware Installation and Connection


- (1) Please adhere to “1.1.1 Mixer Type Supported” to choose a mixer type and assemble your aircraft.
- (2) Please adhere to both “1.1.2 Hardware Connection Diagram” and “1.1.3 Important for Assembly and Connection” to install and connect all units on your aircraft.

1.1.1 Mixer Type Supported


Following Mixer Types are supported.

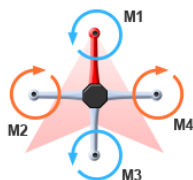

Quad-rotor I

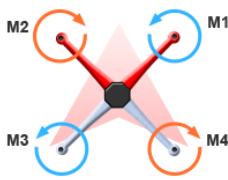


Quad-rotor X

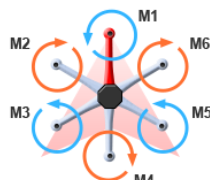


Hexa-rotor I




Hexa-rotor V

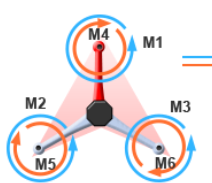


Hexa-rotor IY

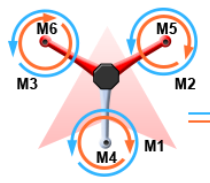


Hexa-rotor Y

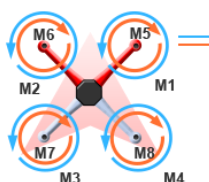

Octo-rotor X

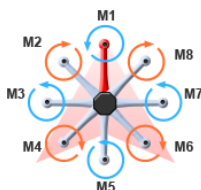

Octo-rotor I

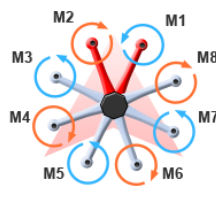


Octo-rotor V



The direction of the arrow in diagram indicates the rotation direction of the motor/propeller.

For coaxial propellers: Blue propeller is at TOP; Red propeller is at Bottom. Otherwise all propellers are at top.

1.1.2 Hardware Connection Diagram

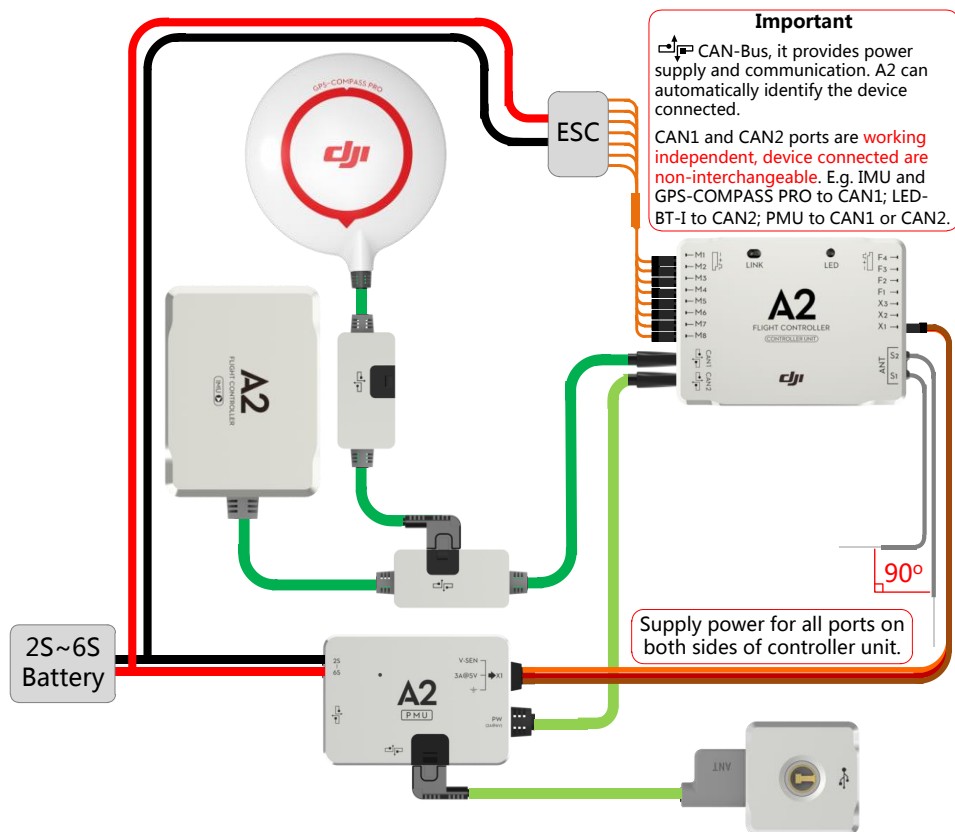

1.1.3 Important for Assembly and Connection


This section describes all device port functions, assembly requirements, connection requirements and tips during usage. Also the linking procedures between the built-in Receiver DRI6 and your Transmitter. **It is very important for the first time usage, please read all text carefully.**

(1) Controller Unit

The Control Unit is the core component of the A2 flight control system:


- (1) M1-M8 are used to connect to the ESCs of the aircraft.
- (2) The built-in Receiver DR16 is based on DJI DESST technology, which can be used with the Futaba FASST series and DJI DESST series Transmitter.
- (3) CAN1 and CAN2 ports are working independently and should connect to different modules.
- (4) 4 independent and configurable outputs.
- (5) It is compatible with the external Receiver, e.g. DSM2 satellite Receiver.
- (6) Use the optional DJI DBUS Adapter to support the traditional receiver.

Port Description

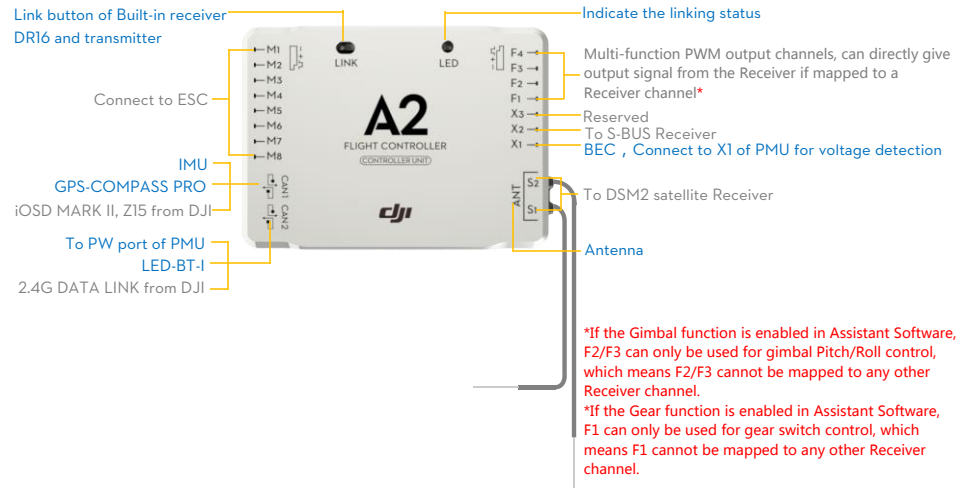

Mounting Requirements:

Install the Controller Unit in the proper position to make sure the ports are accessible. No specified direction is required.



Place the antennas in an open space under the aircraft, DO NOT block them. Position the heads of two antennas at a 90-degree angle. DO NOT bend or wind them.

Receiver System




The A2 flight control system can use its own built-in Receiver, and also can support external receivers. Whatever type of Receiver is used, please make sure that the Receiver and Transmitter is linked correctly before use.

A. Built-in Receiver

For enhancing the system integration and reliability, the A2 is integrated with a 2.4G receiver based on frequency hopping technology. The built-in Receiver can be used with the Transmitter of Futaba FASST series or DJI DESST series after linking. For users, you are only asked to carry out the link procedures, no extra requirement for connection.


Please carry out the following procedures to finish the Link process, and the configuration in the **A2 Assistant software**->**Basic** ->**R/C** ->**Receiver Type**. Select the **DRI6** option.

During use, you may see the following LED indication, please do the operation according to the table below.

LED	Description	Operation
 (α)	Signal from Transmitter has been detected by the Receiver, but not matched.	Link operation required
 (α)	No Transmitter signal is received, e.g. the flight control system is powered on but the Transmitter is powered off.	Switch on
 (α)	The Receiver and Transmitter have been linked to each other successfully.	Can work normally




Link Procedures
1. Turn on the transmitter, it begins to send signals after 1.5secs.
2. Power on the flight control system, configure the Receiver type as DR16 in the Assistant software.
3. Press the LINK button, hold for 2secs, wait until the LED blinks Red ●.
4. Release the LINK button, the LED turns Green on after successfully linking.

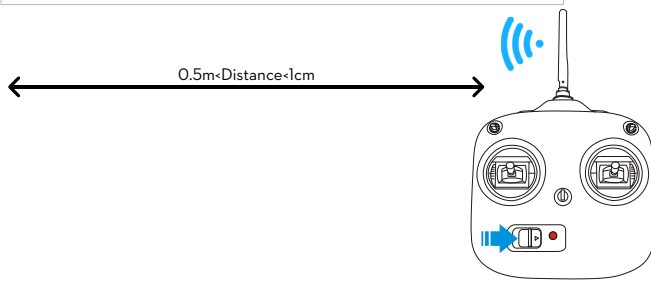

The DR16 Receiver is compatible with the Futaba transmitters which have optional FASST MODE MULT, MLT2 or 7CH. Users can find out the available Futaba transmitters and configuration requirements adhere to the FAQ->The Transmitter setup of FUTABA.

B. DSM2 Satellite Receivers

If using DSM2 satellite Receivers, please follow the diagram for connection, set the Receiver referring to your Receiver manual, and select the Receiver type as **DSM2** in the **Assistant software->Basic->R/C-> Receiver Type**.

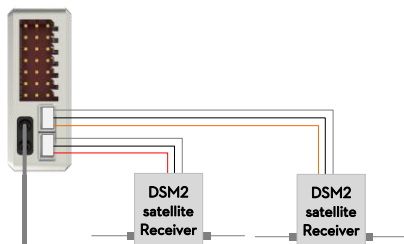

Linking procedures
1. Power on the flight control system, the Transmitter should be turned off.
2. Set the Receiver type as DSM2 in the Assistant software.
3. Press and hold the LINK button on the controller unit the LED blinks red ● and the indicators on the Receivers blink too. Then release the LINK button the Receiver will be ready for linking.
4. Press and hold the linking button on the Transmitter then turn on the Transmitter to start linking, release the button after the Transmitter is displayed Linked or the indicators on the Receivers are solid on.
5. The LED on the controller unit will be solid green on after linking successfully.



Notes for the DSM2 users:


- It is not needed to enable the Failsafe function in the Transmitter. Once the Receiver loses the signals

from the Transmitter, the controller unit will enter into Failsafe automatically, and the aircraft will hover or Go-home as configurations of the Failsafe in the Assistant software.

- When using the dual-mode Transmitter, please set the transmitting mode as DSM2 in SYSTEM SET UP->FRAME RATE ->MODE, which should not be DSMX.
- Support DSM2 satellite Receivers used with all SPEKTRUM Transmitters, e.g. DX6I DX7S DX8 DX18 etc., as well as JR Transmitters, e.g. DXS9II DXS11.


C. S-BUS Receivers

If using S-BUS Receivers please follow the diagram for connection, set the Receiver referring to your Receiver manual, and select the Receiver type as **D-BUS** in the **Assistant software->Basic->R/C-> Receiver Type**.

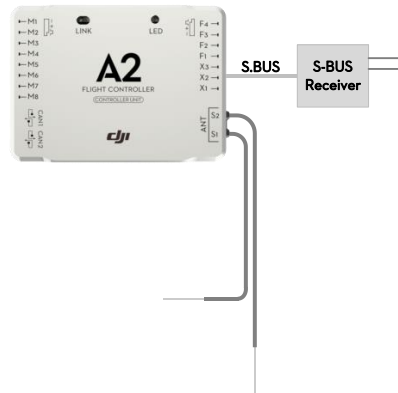


D. PPM Receivers

If using PPM Receivers please follow the diagram for connection, set the Receiver referring to your Receiver manual, and select the Receiver type as **PPM** in the **Assistant software->Basic->R/C-> Receiver Type**.

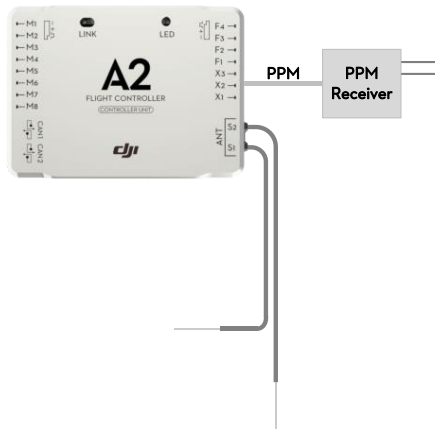

E. Traditional Receivers

If using Traditional Receivers, the DJI D-BUS Adapter is required. Please follow the diagram for connection, set the Receiver referring to your Receiver manual, and select the Receiver type as **D-BUS** in the **Assistant software->Basic->R/C-> Receiver Type**.

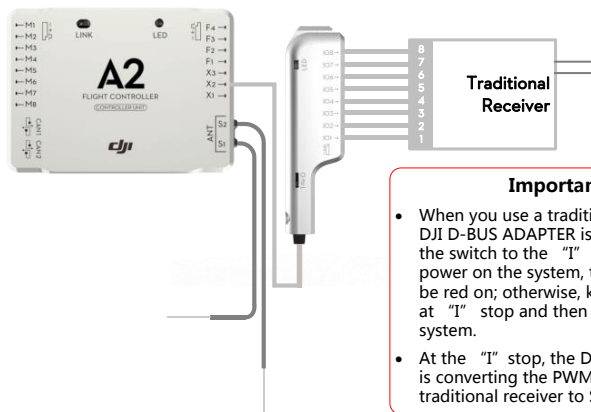


(2) IMU (Inertial Measurement Unit):


Built-in inertial sensors, for the measurement of aircraft attitude; built-in pressure sensor for the detection of aircraft altitude. Should be connected to the CAN1 port of the Control Unit, and be mounted according to the required location and orientation. The IMU has been calibrated before shipping, it should be used under the specified temperature; otherwise the temperature may have an effect on the the IMU performance.	
Working environment temperature: -5°C ~60°C	Storage environment temperature:<60°C

Orientation Requirements:

Please mount the IMU as one of the following options. Configure in the **A2 Assistant software** ->**Basic** ->**Mount** ->**IMU**, and select the matched option.

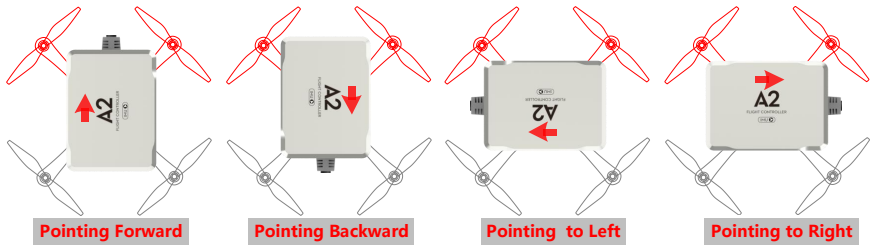

Location Requirements:

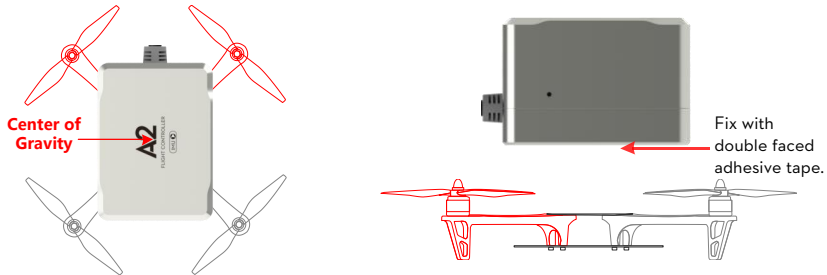

	(1) The top side should be facing up. DO NOT mount upside-down.
	(2) DO NOT cover the ventilation holes, keep them unblocked and clean.
	(3) Take heat preservation measures if working in cold weather.
	(1) Mount the IMU at a low vibration position and the sides of the IMU should be precisely parallel to the aircraft body. Based on our experience, there is less vibration near the aircraft 's center of gravity.
	(2) NOT water-proof or oil-proof.
	(3) Check the double faced adhesive tape regularly to make sure that the IMU is fixed firmly.

There is a CAN-Bus connector, which can be used to connect to the GPS-COMPASS PRO or other DJI product.



(3) GPS-COMPASS PRO

GPS-COMPASS PRO module has a built-in GPS and compass. The compass is used for geomagnetic field measurement. It should be mounted according to the required location and orientation. Compass calibration is required before use. DO NOT use and store the compass in the ferromagnetic material environment.


Mounting Procedure:

- a) Use the epoxy resin AB glue to assemble the GPS bracket first. The longest one is recommended.



- b) Mount the bracket on the aircraft first, and then fix the GPS-COMPASS PRO on the plate of the bracket (using the 3M sticky pads provided).

Mount Requirements:

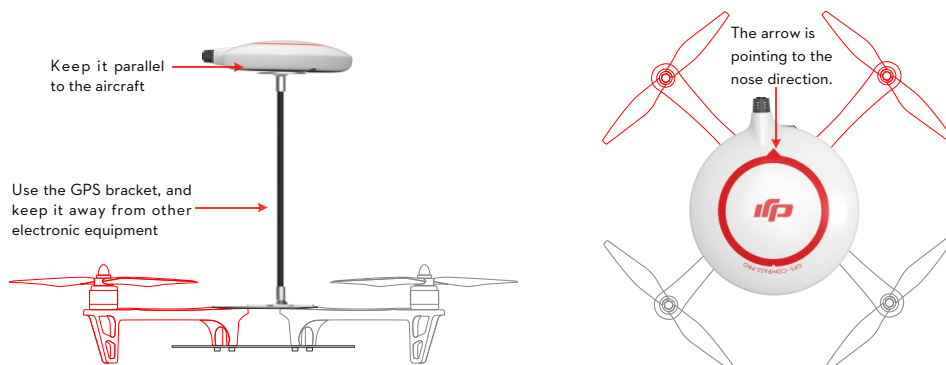

Usage Requirements

- (1) The DJI logo should be facing the sky, with the orientation arrow pointing directly to the nose direction; otherwise it may lead to **take off failure**.
- (2) Fly the aircraft in an open space without buildings or trees; otherwise it may have an effect on the GPS.
- (3) The compass is sensitive to magnetic interference, should be far away from electronic devices, otherwise it may lead to **abnormal flying**.
- (4) Please always keep the compass module away from magnet fields. Otherwise it may damage the compass module and lead the aircraft to work abnormally or even be out of control.


(4) PMU (Power Management Unit)

The PMU provides dual BEC 's:

- (1) Connect the battery to the PMU module to supply power for the whole Flight Control System via the PW port (supply power not more than 2A).
- (2) Connect the PMU to the X1 port of Controller Unit for voltage monitoring, for flight safe guard during flying.

In addition, there are two CAN-Bus ports for LED-BT-I connection and other DJI products (e.g. DJI 2.4G Data Link).

Port Description

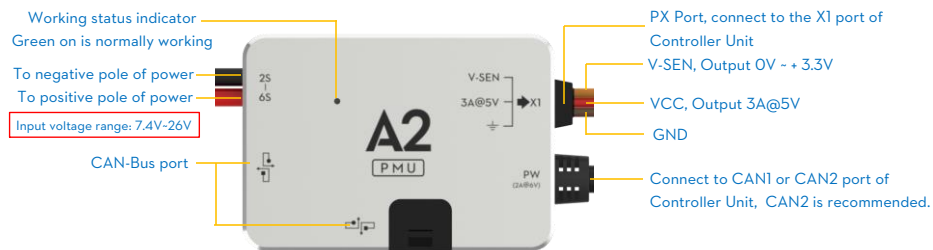

Mounting Requirements:


No need to mount in a particular orientation. But choose a ventilated place to mount the PMU for cooling.

(5) LED-BT-I

The LED-BT-I has integrated LED Indicator, Bluetooth and USB port:

- (1) The LED is mainly for flight control system status indication during flying (e.g. Control Mode).
- (2) Bluetooth is used for real-time communication with your mobile device (e.g. iPhone), to realize parameter configuration on a mobile device. For parameter configuration using a mobile device, it is required to install the DJI Assistant App on the mobile device. When you mount the LED-BT-I, please make sure the side with ANT LOGO is unsheltered after mounting.
- (3) In addition, there is a Micro-USB port, make sure it is mounted for convenient connection.

Port Description:

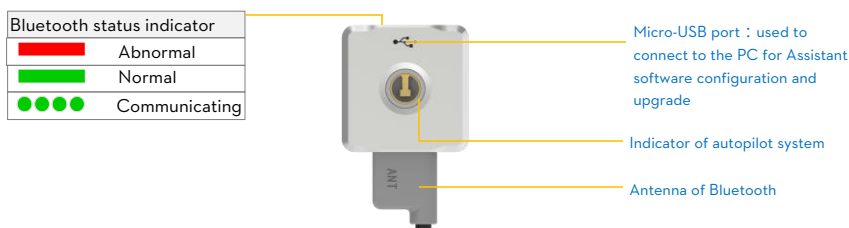


Mounting Requirements:


Mount in a good place to make sure the LED is visible during flying. Antenna of Bluetooth should be unobstructed.

1.2 Software Installation and Configuration

Configure the A2 flight control system in the Assistant software please adheres to this section. **Users are required to configure every item in “Basic” page when use the A2 flight control system for the first time.**



1.2.1 Install Driver and Assistant Software

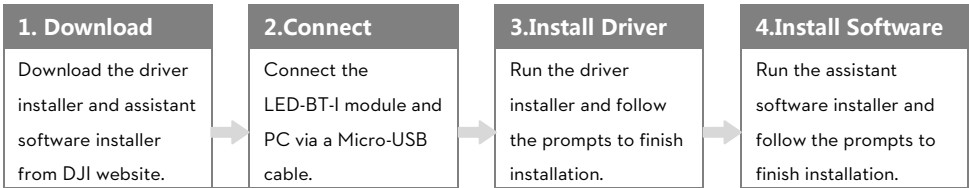

 Assistant software supports only Windows operating systems (Win XP, Win7, Win8 (32 or 64 bit)).

1.2.2 Configure using Assistant Software on a PC

The USB port can supply power during configuration, no additional battery is required. Note that the USB port can supply power not more than 500mA, an additional battery is necessary if connection failure or intermittent working. Run the assistant software, and follow the built-in guide to carry out the configuration. Note that you may be asked to register for first time use.

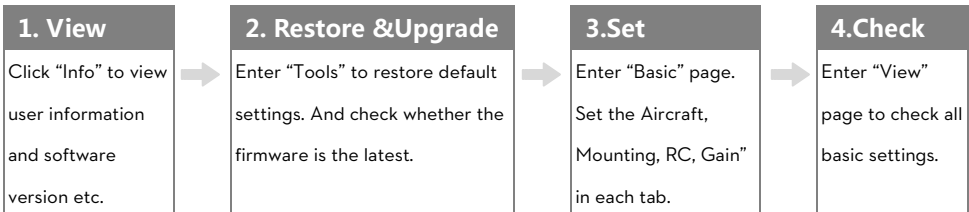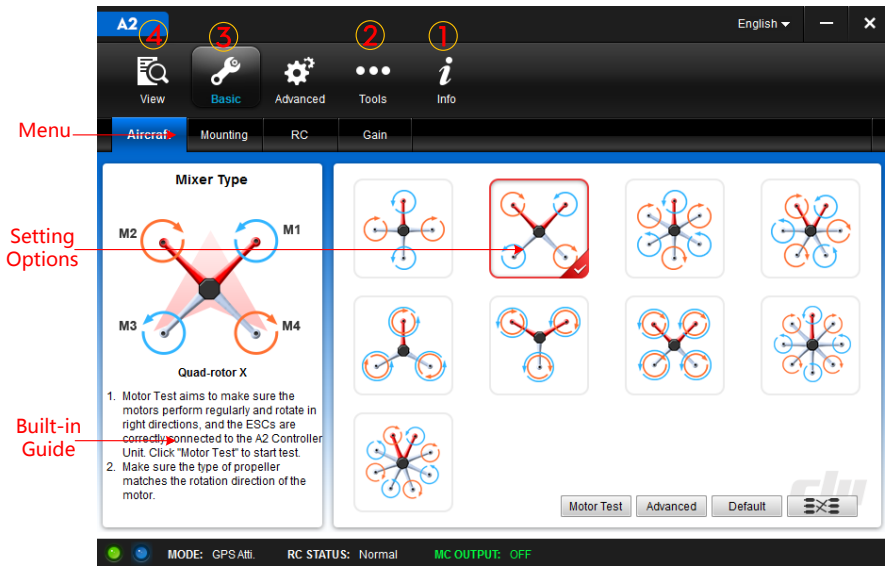



"RC STATUS" description:

Normal- Communication between the transmitter and receiver is well.


Disconnect- The A2 Flight Control System is power on, but the transmitter is power off.

RC-LOST- RC signal is lost, or the transmitter is power off after switch on

Abnormal - Other situations.

1.2.3 Configure the control mode switch


Users should configure the control mode switch in the Assistant software in the following page. Only the mode switch has been set correctly, the control mode displayed in the left bottom corner will be the same to the control mode pointed by the cursor on the channel U.

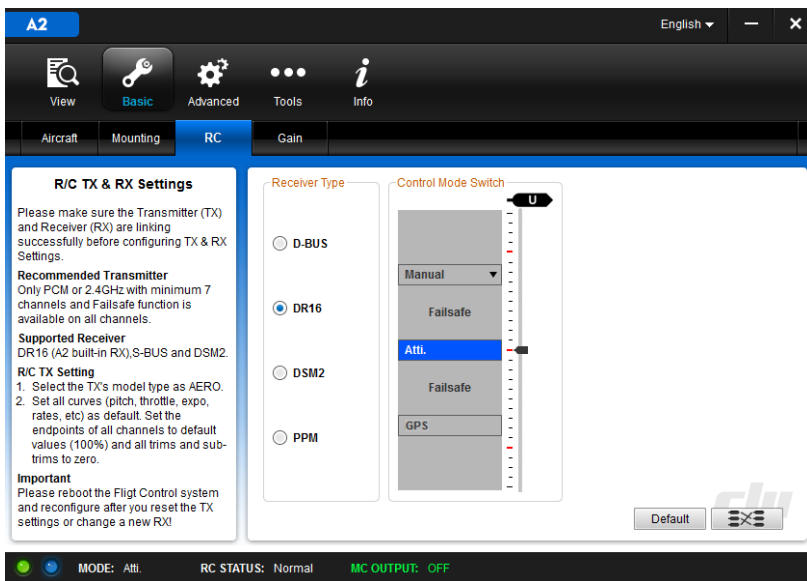

Configuration steps	Exzamples
<p>Step 1.</p> <p>Power on your Transmitter, map a 3-position switch on the transmitter to the U channel of Fight controller as the control mode switch, of which two positions are default as Atti. and GPS Mode and the other position is optional, users can set as Atti. or Manual Mode.</p>	


Step 2.

Toggle the control mode switch to its three positions, accordingly the cursor will move to some control mode.

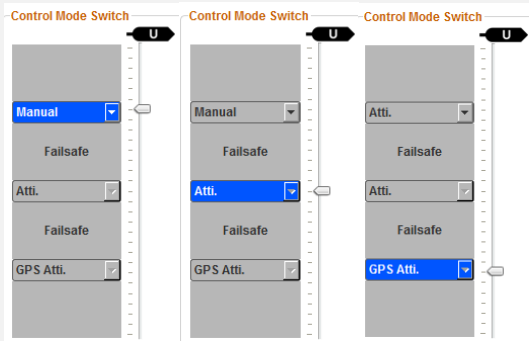

Step 3.

Power off the Transmitter, the Failsafe will be enabled and the cursor will point to any area out of the control modes.

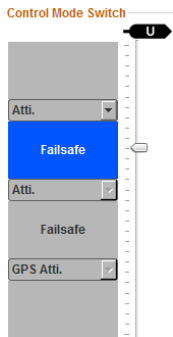


Step 4.


If all steps above are realized, that indicates the control mode switch is set successfully.

Important

In step2, if the cursor doesn't point to the correct control mode area (e.g. the following figures), that indicates abnormal control mode switch configuration. Users must re-configure the Endpoint and FailSafe functions in the Transmitter to make the cursor right point to the control mode switch and the control mode areas become blue.

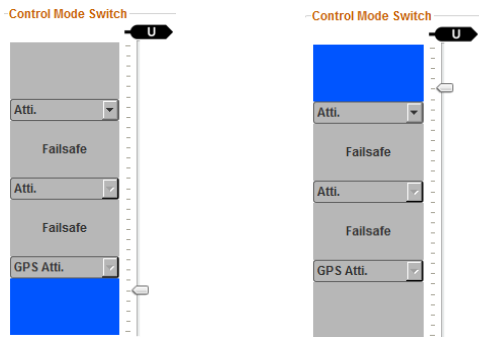

1.2.4 Configuration Checking

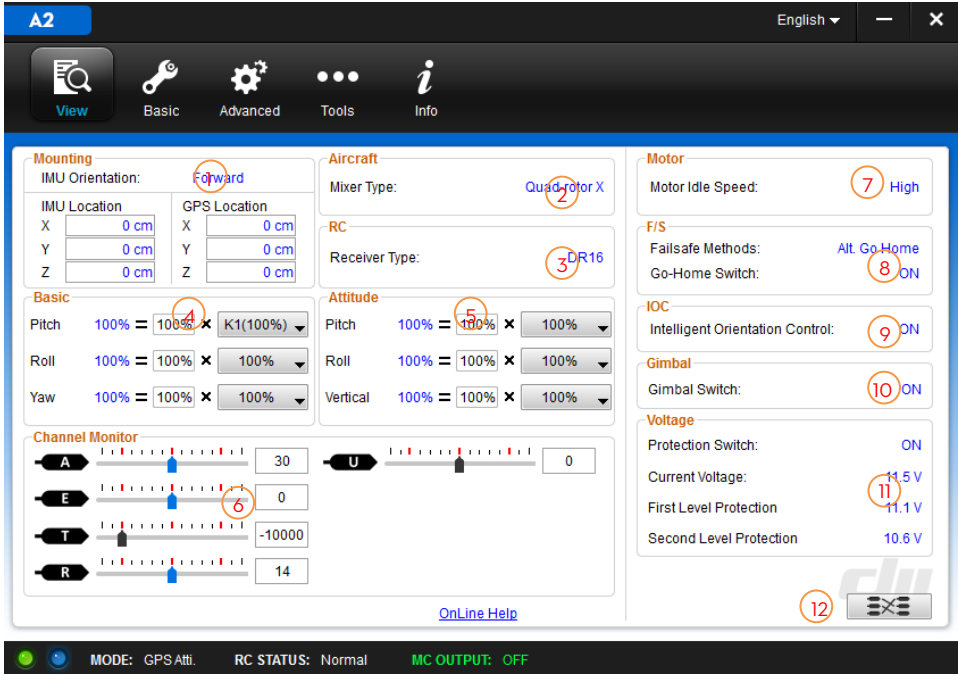

*Fig. above for reference only, please adhere to actual GUI.

Check List	Description
①	Check the IMU orientation direction.
②	Check the Mixer Type of aircraft.
③	Make sure the motors are rotating normally, and propeller installation is in correct direction.
④	The Receiver type is correct.
④、⑤	Check the basic and attitude gains.
⑥	Move the sticks to test whether the cursors moves following the sticks. Toggle the “U” switch to test the control mode setting.
⑦~⑪	Advanced configuration, users can configure it according to their requirements after reading the manual.
⑫	Check the Channel Map between the Transmitter and A2 flight control system.

1.3 Compass Calibration


The Compass can assist the GPS to position the aircraft, which is very important during flight. As we know, the compass is very sensitive to electromagnetic interference, which will cause abnormal compass data, and lead to poor flight performance or even flight failure. **Compass Calibration MUST be done for the first time use.** It is recommended to calibrate the compass outdoors after the Controller Unit finds 7 or more GPS satellites. Regular calibration enables the compass to keep optimal performance.

Calibration Cautions

- ⊘
- (1) DO NOT calibrate your compass where there is strong magnetic interference, such as magnetite, car park, and steel reinforcement under the ground.
 - (2) DO NOT carry ferromagnetic materials with you during calibration, such as keys or cell phones.
 - (3) Compass Calibration is very important; otherwise the flight control system cannot work.

Calibration Procedures

Choose an open space to carry out the following procedures.

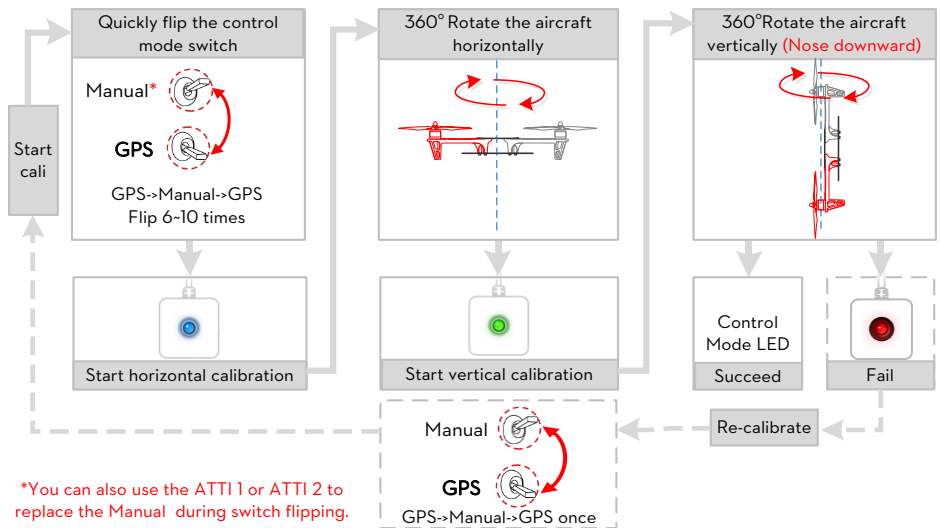

Situations that require recalibration

Situations	Descriptions
Compass Data abnormal	LED blinks yellow and green alternatively(●●(∞)).
Flying field altered	Flying field has changed over a long distance.
Mechanical alteration	The mounting position of GPS-COMPASS PRO module changes. Electronic units such as Controller Unit, CAN-HUB, battery etc. have been added, removed, remounted or other alterations. Mechanical structures of the aircraft has changed
Drifting during flying	Evident drifts occurred in flight such as the aircraft doesn't fly straight
Attitude errors	LED often blinks error indicator when the aircraft turns around.

2 Basic flying

Read this section before basic flight testing.


2.1 Control Mode Instruction

The aircraft performs differently when using different control modes. Please read the following table to know the different control modes, which may help you to achieve a more involved flight experience.

	Control Mode 3	Control Mode 2	Control Mode 1*	
	GPS	ATTI. 2	ATTI. 1	Manual
Command Linearity	YES			
Yaw	Control the aircraft to rotate in clockwise and counter clockwise direction. Maximum rudder angular velocity 150°/s			
Roll and Pitch	Aircraft attitude control; Mid point of stick is for 0° attitude, and its endpoint is 35°.		Max-angular velocity is 150°/s. No attitude angle limit.	
Throttle	Aircraft height control. Maintain the altitude best above 1 meter from ground when the throttle stick is in mid position.		No altitude locking when the throttle stick is in mid position.	
All Sticks Released	Lock position if GPS signal is adequate.	Only attitude stabilizing. No position locking.	Keep original attitude.	
GPS Lost	When GPS signal has been lost for 3s, system enters ATTI. Mode automatically.	---	---	
IOC Supported	CL/HL/POI	CL	None	
FailSafe Protection	The flight control system will enter FailSafe Mode if the Transmitter signal is lost and no matter if Transmitter signal recovers or not, system will not exit failsafe mode automatically.		The flight control system will enter FailSafe Mode if the Transmitter signal is lost and the system will exit Failsafe once the signal recovers.	
GPS Involved	YES		NO	
Low-voltage Protection	LED alert with Descending or Go Home & Landing precautions		Only LED alert	
Environment recommended	Open flying field; Good GPS signal	Narrow Space; GPS signal bad	Regain control in emergency	


*Default is Manual; users can set to ATTI.1 in Assistant software. The biggest difference between ATTI.1 and ATTI.2 is that they are working differently in the protection situations.

2.2 Flying Environment Requirements


- (1) Before use of the product, please accept some flight training (Using a simulator to practice flying, getting instruction from a professional person, etc.).
- (2) DO NOT fly in bad weather, such as rain or wind (more than moderate breeze) or fog.
- (3) The flying field should be open without tall buildings or other obstacles; the buildings of steel structure will interfere with the compass.
-  (4) Keep the aircraft away from obstacles, crowds, power lines, trees, lakes and rivers etc.
- (5) Try to avoid interference between the remote control Transmitter and other wireless equipment. (No base station or cell tower around)
- (6) The flight control system can't work at the South Pole and the North Pole.
- (7) All parts must be kept out of the reach of children to avoid CHOKER HAZARD; if a child accidentally swallows any part you should immediately seek medical assistance.

2.3 Check List before Flying

Double check the following list, otherwise, if any one of the following items is wrong it may lead to flight accident.

- (1) All parts are in good condition, no ageing or damaged components
- (2) Motor rotating direction
- (3) Propeller mounting direction
- (4) Mixer Type set in assistant software
-  (5) IMU and GPS-COMPASS PRO mounting direction
- (6) Transmitter channel mapping and sticks movement direction correct
- (7) Compass calibration
- (8) ESC connection
- (9) IMU and GPS-COMPASS PRO firmly mounted




In addition, check the following items to make sure the system can work.

- (1) The Transmitter battery is fully charged.
-  (2) The aircraft battery is fully charged.
- (3) Do not over load the aircraft.

2.4 Power on and Check

(1) Control mode LED indicator

Power on the Transmitter and flight control system. Toggle the control mode switch to different positions.

Control Mode LED indicator			
Control Mode Switch	 GPS	 ATTI 2	 Manual
LED	● (Stick not in midpoint ●(2))	● (Stick not in midpoint ●(2))	No LED indicator
Set	Put the Control Mode switch to GPS position for basic flying test. Note: when the GPS signal LED indicator is bad or worst (●(2) or ●(3)) and lasts for more than 3secs, the flight control system will enter into ATTI2 Mode.		


(2) GPS signal LED indicator

GPS signal indication blinks after every Control mode indication. We suggest to fly when GPS satellites are more than 5.


GPS signal LED indicator			
Worst (→GPS← 5) : ●(3)	Bad (→GPS← 5) : ●(2)	Well (→GPS← 6) : ●(1)	Best (→GPS← 6) : No indicator

2.5 Start Motors Methods

CSC (Combination sticks commands) is used to start/stop motors instead of just pushing the throttle stick.

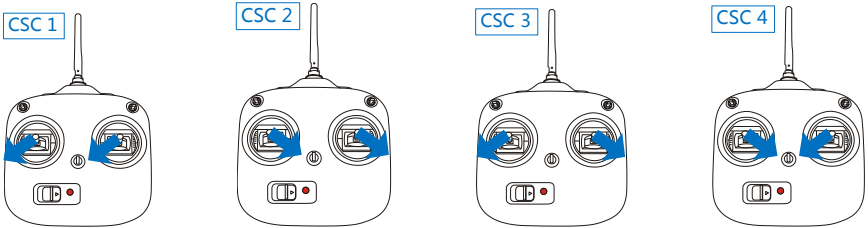

Under the conditions stated below, the motors will stop in ATTI 1/ ATTI 2/GPS mode:

- 
- (1) The throttle sticks is under 10% for more than 3secs after motors start.
 - (2) The throttle sticks is under 10% for more than 3secs after landing.
 - (3) The throttle sticks is under 10% for more than 3secs and the inclined angle of aircraft exceeds 70°.

2.6 Basic Flying Test

Carry out the following procedures to complete the basic flight test.

1. Wait the GPS signal to be well	LED
Place the aircraft away from you and others at least 3 meters and wait the $\text{GPS} \geq 6$.	● or no Red LED



2. Start motors and takeoff aircraft.	LED
Execute CSC to start motors; all sticks back to midpoint as soon as motors start, then push the throttle stick to take off the aircraft, meanwhile the home point is recorded. NOTE: 30secs after power on; 10secs after $\text{GPS} \geq 6$; Motors have been started, auto-record the position as home point at the first time the throttle stick is raised	●(α)
After the home point is recorded successfully and the distance from aircraft is less than 8m, LED indicator will blink 6 violet continually. Note: only when GPS signal is good (no Red LED) LED indicator will blink 6 violet continually.	●(6)



3. Operate sticks to control the flying attitude of the aircraft during flight		
Transmitter (Mode2)	Aircraft	Operations
Throttle Stick 		Push Throttle sticks to control the aircraft to elevate and descend. The aircraft can lock to an altitude when the throttle stick is at midpoint.
Yaw Stick 		Push the yaw stick to rotate the aircraft in clockwise or counter clockwise direction.
Roll Stick 		Push roll stick to control the aircraft left or right, pitch stick to control forward or backward. When both roll and pitch sticks are at midpoint :
Pitch Stick 		(1) GPS mode: the aircraft will be stabilized and locked in horizontal position. (2) ATTI 1/ATTI 2 mode: the aircraft will be stabilized but unlocked in horizontal position.



4.Hover

In GPS mode , the aircraft will hover when the throttle/yaw/roll/pitch sticks are all released at mid-point.



5.Landing

Use the throttle stick to control the landing speed, try to land your aircraft gently to avoid shock or crash.

Please refer to the next section "Protection Functions Setting" to take precautions.



- (1) Low voltage alert: yellow quick flashes or red quick flashes.
- (2) FailSafe: LED indicator blinks blue.

Moreover, you may come across the following abnormal situation, please carry out the operation below.








- (3) Compass data is abnormal; the LED blinks yellow and green alternatively. Please re-calibrate the Compass.
- (4) IMU data is abnormal, the LED blinks four green. Please contact your dealer.

3 Protection Functions Setting


Set protection in the Assistant software ->Advanced page. FailSafe and Low voltage protections are required.

3.1 FailSafe

FailSafe works when the Transmitter (TX) signal is lost, the flight control system will automatically control the aircraft to reduce injuries or damage.

	TX signal		Descriptions
Home Point (HP)			30secs later after power on; 10secs later after $\text{GPS} \geq 6$ (● or no Red LED); Motors have been started; auto-record the position as home point at the first time the throttle stick is raised.
FailSafe		$\text{GPS} \geq 6$	Flight control system can automatically control the aircraft after Transmitter signal is lost. It should be set in Assistant software->Advanced->F/S , while Hover, Go-Home or Alt Go-Home is optional. Additionally, a Go-Home switch can be enabled.
One-Key Go Home			Go Home switch can be used to trigger a “go home” without FailSafe. If One-Key Go Home is enabled during flying, you no longer have control of the aircraft, the LED blinks in its Control Mode. If One-Key Go Home is disabled, you regain the control at once. If already in a Failsafe condition, then the switch will not work.

Failsafe and Go Home procedures

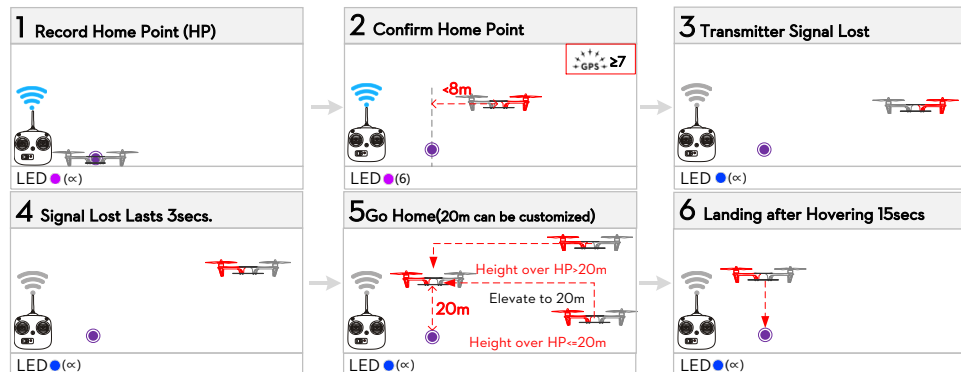

- (1) The aircraft will not go home (only attitude stabilizing) in the condition that $\text{GPS} < 6$ or GPS is not working, even if Transmitter signal is lost or Go Home switch is triggered.
- (2) It is recommended to set the Go Home switch in the Assistant software. Users are suggested to enter Failsafe and go home by using the Go Home switch rather than turning off the Transmitter in

emergency situations.

- (3) Make sure there are no obstacles during aircraft go home and users are familiar with the methods to regain control.



How to regain control in FailSafe

	GPS	ATTI 2	ATTI 1	Manual
Regain control	You have to toggle the control mode switch once to regain control if the signal recovers, y.		Regain control as soon as signal recovers.	

3.2 Low Voltage Protection

Low voltage protection is used to alert low battery voltage during flight; in this case, users should promptly fly back the aircraft and land to avoid unexpected damages.

To use this function please set in **Assistant software->Advanced->Voltage** page to configure two voltage levels.

Protections		Option Selected	Conditions	LED	Aircraft
	First level	LED	----	●(∞)	None
		GH & Landing	Make sure the home point is recorded and no obstacles in going home and landing path.	●(∞)	Go-Home & Landing
	Second level	LED	----	●(∞)	None
		Descending	----	●(∞)	Descending directly

Go-Home & Landing Usage Tips

- (1) The home point recorded is the same in both Failsafe and Low voltage protection. The aircraft will not go home in the following cases :
 - a) Control mode is in Control Mode 1 (Manual or ATTI 1)
 - b) GPS signal is bad ($\pm GPS < 6$)
 - c) The distance between aircraft and the home point is less than 25m, and the height over the Home point less than 20m.

Descending Usage Tips

The aircraft will not hover when the throttle stick is at the mid point. Push the throttle stick to 90% of endpoint, the aircraft will still ascend slowly if you continue to pull the throttle stick, and the control of Pitch, Roll and Yaw are the same as before.




Please pay attention to the LED alert of low voltage and make sure the power is enough for go home and landing. Insufficient power reserve will cause the aircraft to crash and other consequences.

4 Advanced Functions

IOC and Gimbal functions of A2 and how to use A2 Assistant app via a mobile device.

4.1 IOC (Intelligent Orientation Control) function

	IOC	Help users to set the Flying direction; Should be enabled in Assistant software.
	Flying direction	The flying direction of aircraft when pushing the Roll and Pitch sticks.
	Forward direction	The flying direction of aircraft when the pitch stick is pushed forward.
	Normal flying	IOC is disabled. Forward direction is pointing to the nose direction and changes along with the nose.
	CL flying	Course Lock. Its forward direction is pointing to the nose direction when recording, which is fixed until you re-record it or exit from CL.
	HL flying	Home Lock. Record a Home Point (HP), push Pitch stick to control the aircraft far from or near to the HP.
	POI flying	Point of Interest. Record a point of interest (POI), the aircraft can circle around the POI, and the nose always points to the POI.




Conditions of IOC function

Flying	IOC Setting	Control Mode	GPS-COMPASS PRO Required	GPS Satellites	Distance Limits
Normal	----	----	----	Basic to control mode	None
CL	Enabled	Not in Manual	Compass	None	None
HL	Enabled	GPS	GPS	$\begin{matrix} \star \star \star \star \\ +GPS+ \end{matrix} \geq 6$	Aircraft $\xleftarrow{\geq 10m}$ HP
POI	Enabled	GPS	GPS	$\begin{matrix} \star \star \star \star \\ +GPS+ \end{matrix} \geq 6$	Aircraft $\xleftarrow{5m-500m}$ POI

Step 1 IOC switch setting


 







Please enable the IOC function in **Advanced->IOC** page of Assistant software. Then choose a 3-positon switch on the Transmitter to set as IOC switch, which is used to select the different IOC modes and manually record the Forward direction, HP and POI recording.

Below are the three options of IOC switch setting which may be configured in the Assistant software.

Switch positions		A	B	C
1		OFF	OFF	OFF
2		CL	CL	POI
3		HL	POI	HL

Step 2 Forward Direction, HP and POI Recording

After you enable the IOC in assistant software, the flight control system will record the forward direction and home point automatically after power on, if the recording conditions are met. You can Manually re-record the forward direction, home point and POI during flying. Read the following table for the recording method details.

	CL	HL	POI
Aims	Record a direction as Forward direction	Record a position as HP	Record a position as POI
Conditions	30secs after power on	30secs after power on; 10secs later after  GPS+≥6; Motors have been started.	30secs after power on; 10secs later after  GPS+≥6.
Automatically	Automatically record at 30secs after power on	Automatically record at the first time you push the throttle stick	No Automatic record method
Manually	According to any option of IOC switch setting, quickly toggle the switch between adjacent positions 3-5 times to record manually. <div><div><div>1</div><div>2</div></div><div><div>AForward direction</div><div>BForward direction</div><div>CPOI</div></div><div><div>2</div><div>3</div></div><div><div>AHP</div><div>BPOI</div><div>CHP</div></div></div>		
Successful	 (20)	 (20)	 (20)

A

HP

B

POI

C

HP

-
- (1)

DO NOT toggle the switch between the 1 and 3 positions frequently, which may re-record the position 2.
- (2)

HP is used not only in IOC, but also in Failsafe and Low voltage for go home and landing. The flight control system will automatically record the HP even if IOC function is disabled in Assistant software but Forward direction and POI can be recorded only after IOC is enabled.
- (3)

Once the Home Point is recorded successfully, LED will blink (6) continually under the following conditions. All conditions must be true.

1.

$+GPS \geq 7$.

2.

Distance between aircraft and the recorded home point is less than 8m.















 
 

 

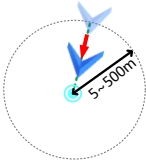
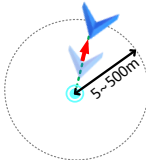
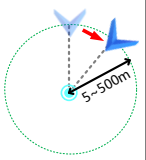
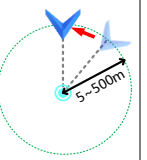
3.

Current control mode is in GPS or ATTI 2.

Step 3 IOC flying test

Please study the following diagram then make an IOC flying test. IOC LED indicator blinks (2) means stick(not at the midpoint)



Flying	IOC switch	Record	Roll stick control of aircraft		Pitch stick control of aircraft	
						
Normal	OFF	None				
CL	CL					
HL	HL					
POI	POI					



DO NOT toggle the IOC switch frequently in HL flying to avoid re-recording the HP unwittingly.



IOC function is available only when all the required conditions are satisfied. If any condition is omitted the flight control system will exit IOC. Please keep an eye on the LED to know the current control mode.




- (1) It's recommended to start the HL flight when the aircraft is >10m away from the HP. If starting the HL when the distance between aircraft and HP is less than 10m and it's the first time you start HL after power on, then the flight control system will only enter HL after flying out of the 10m range.
- (2) During HL flying if one of the following conditions occur, the flight control system will exit HL and enter into CL: the aircraft is within of 10m from HP; the control mode is changed to ATTI 1 or ATTI2; \pm GPS \pm <6(LED ●(2) or ●(3)).

4.2 Gimbal function

Connect the servos of your gimbal to the Controller Unit as the fig. below , roll servo connects to F3 port and pitch servo connects to F2, and configure in **Advanced->Gimbal** page in the Assistant software. No Receiver channel is asked to be mapped for the F2 or F3 port if gimbal function is enabled in the Assistant Software.

Note: Even you map Receiver channels to F3 and F2 (Which are shown as D3 and D2 in the Assistant Software -> Channel Mapping), the F3 and F2 will not give output signals from the mapped Receiver channels.

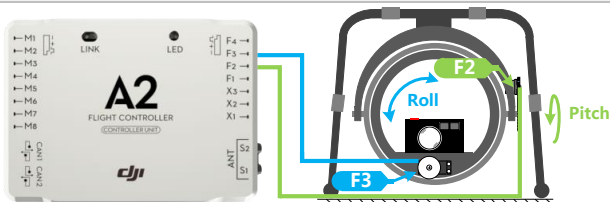


4.3 Gear function

Once enable the Intelligent Gear function, the gear is default down on the ground or in case of emergency (e.g. motor failure tolerance, auto landing); you can control it to be up or down by a switch when the aircraft altitude is above 5m during flight.

Please configure in the **Advanced->Gear** page in the Assistant software. Connect the landing gear of S800 EVO to the Controller Unit as fig. below.



- (1) Make sure to enable and configure the Intelligent Gear function in the Assistant software first, and then connect the gear to the F1 port.
- (2) The Gear channel is required to be mapped with a channel on Receiver if the Intelligent Gear function is enabled in Assistant Software, and the F1 port will give outputs for retracting control.
- (3) Once you map the Gear channel, F1 port will give output signals from the controller for retract control. Otherwise, even the Intelligent Gear function is enabled; F1 will give output from D1 (it's necessary to map the D1 channel with a channel on Receiver as your demands).

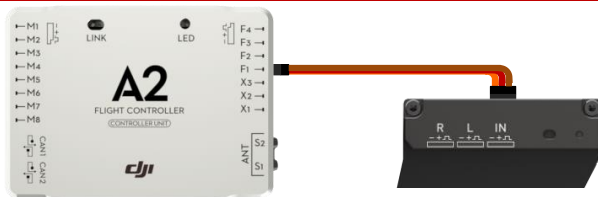

4.4 Attitude Control When One Motor Output Fails

For Hexa-rotor, including Hexa-rotor I, Hexa-rotor V, Hexa-rotor IY and Hexa-rotor Y, the aircraft with A2 flight control system is attitude controllable when one motor output fails.



Select Course lock or home lock mode for flying the aircraft into a safe area to land when the aircraft is far away or the attitude can't be recognized.

4.5 DJI Assistant App Usage

There is a built-in Bluetooth in the A2 LED-BT-I module. With a DJI Assistant App installed on your mobile device, remote parameter configuration can be obtained via Bluetooth communication between the A2 Flight Control System and the mobile device.



Supported iOS devices

iPhone 4s, iPhone 5, iPhone 5s, iPod Touch 5, iPad 3, iPad 4, iPad air, iPad mini
iOS6.1 or above is required. Bluetooth version is required to be 4.0.

Specifications

Bluetooth version	4.0	Environment temperature	-10°C~+50°C
Communication distance	50m	Consumption	240mw(0.04A@6V)

DJI Assistant App Usage

Step 1 Download and installation

Search the **DJI Assistant** in App store on mobile device and install it.

Step 2 Connect the A2 Controller Unit and the DJI Assistant App


1. Prepare an iOS device supported 4.0 Bluetooth, and then enable the Bluetooth function on the mobile device.
2. Power on the transmitter and the A2 Flight Control System, make sure the Bluetooth Status Indicator is solid Green ().
3. Run the DJI Assistant App. You may be asked to register through internet when first login (the account of PC Assistant software is OK for login); follow the tips to set Main Controller name and password.
4. Observe the indicators ● ● on the left bottom of the software. (● connection indicator and ● communication indicator) On the DJI Assistant App, if the communication indicator is ●, please double check the connections and driver installation; otherwise if the indicator is blinking ●, go to next step.
5. Select the “Basic” option. Please follow step-by-step for your first-time-configuration. Basic configuration is necessary. Click the icon ? to get the configuration details.
6. You can click the “Advanced” option for more parameter settings. Advanced setting is optional. There are Motor, F/S, IOC, Gimbal, Voltage, Limits, Gear, etc.
7. Check all parameters in the View page.

8. Select “More” to obtain more details. Including: Restore MC default settings, Accounts, Main Controller List, Information, wiki, Rate DJI Assistant, FAQ, Feedback, About.



1. Make sure to upgrade the LED-BT-I module to the latest firmware via the PC Assistant software on a PC before you use the DJI Assistant App with the A2 Flight Control System.
2. Every time you run the DJI Assistant App, the App will search the Controller Unit automatically.
3. The gain value displayed on Mobile Device and PC may be a little different, that is OK for use.

Step 3 Flying Test Procedures

1. Get the aircraft ready, run the DJI Assistant and make sure it is connected with the main controller. (The indicators on the DJI Assistant are )
2. Start the motors.
3. The “View” page shows the relative parameters real-time when flying.
4. Go to the “Basic” and click into the “Gain” page to set the values of all gains real-time during flying.
5. Go to the “Basic” and click into the “Tool” page to view the values of IMU & Compass real-time during flying.
6. Finish the flying and land your aircraft.



Only the parameter referred above can be changed during flying. Others can be configured after landing.

Appendix

LED indicator descriptions

Control mode	GPS signal
Manual : No indicator	Best (+GPS+> 6): No indicator
ATT1: ●(1) (sticks not in mid-point ●(2))	Good (+GPS+= 6): ●(1)
ATT12: ●(1) (sticks not in mid-point ●(2))	Bad (+GPS+= 5): ●(2)
GPS: ●(1) (sticks not in mid-point ●(2))	Worst (+GPS+< 5): ●(3)
Ground Station: ●(1)	

Flight Attitude	
Attitude good: No indicator	Attitude status bad: ○(3)
Attitude status bad, hover/sticks at mid recommended: ○(2)	IMU data lost, calibrate IMU needed : ●(4)

Compass calibration	
Horizontal calibration ●(∞)	Calibration Failed ●(∞)
Vertical calibration ●(∞)	Abnormal Compass Data ●●(∞)

Low voltage alert	
First level alert ●(∞)	Second level alert ●(∞)

FailSafe mode	
During the FailSafe ●(∞)	

IOC Recording	
Record home-point successfully	●(20)
Aircraft is in the 8m range of HP	●(6)
Record forward direction successfully	●(20)
Record a Point Of Interest successfully	●(20)

Bluetooth	
A2 Assistant is connected / disconnected to the flight control system ●●(∞)	



When the LED blinks ○(2) or ○(3), please hover or land the aircraft and wait for the white LED to go off.

When the LED blinks ●(3), it is not recommended to fly.

When the LED blinks ●(4), please contact your dealer.

Specifications


General			
Built-In Functions	●	Built-in Receiver	● External Receiver Supported
	●	Multiple Control Modes	● 9 Types of Supported Multi-rotor
	●	2-axle Gimbal Supported	● Other DJI Products Supported
	●	Enhanced FailSafe	● Low Voltage Protection
	●	Intelligent Orientation Control	● 4 Configurable Outputs
	●	Dynamical Systems Protection	● Sound Alarm
	●	PC & Bluetooth Ground Station	● Configure Parameters Via Bluetooth
Peripheral			
Supported Multi-rotor	●	Quad-rotor: I4, X4	
	●	Hexa-rotor: I6, V6, Y6, IY6	
	●	Octo-rotor: X8, I8, V8	
Supported ESC output		400Hz refresh frequency.	
Supported Transmitter for Built-in Receiver		Futaba FASST (MULT, MLT2, 7CH) Series and DJI DESST Series	
External Receiver Supported		Futaba S-Bus, DSM2, PPM	
Recommended Battery		2S ~ 6S LiPo	
Assistant Software System Requirement		Windows XP SP3 / 7 / 8 (32 or 64 bit)	
Other DJI Products Supported		Z15, iOSD Mark II, D-BUS Adapter, S800 EVO, 2.4G Data Link, H3-2D (coming soon)	
Electrical & Mechanical			
Power Consumption		MAX 5W (Typical Value: 0.3A@12.5V)	
Operating Temperature		-5°C to +60°C	
Total Weight		<= 224g (overall)	
Dimensions	●	MC: 54mm x 39mm x 14.9mm	
	●	IMU: 41.3mm x 30.5mm x 26.3mm	
	●	GPS-COMPASS PRO: 62 mm (diameter) x 14.3 mm	
	●	PMU: 39.5mm×27.6mm×9.8mm	
	●	LED-BTU-I : 30mm x 30mm x 7.9mm	
Flight Performance (can be effected by mechanical performance and payloads)			
Hovering Accuracy (In GPS Mode)	●	Vertical: 0.5m	
	●	Horizontal: 1.5m	
Maximum Wind Resistance		<8m/s (17.9mph / 28.8km/h)	
Max Yaw Angular Velocity		150deg/s	
Max Tilt Angle		35°	
Ascent / Descent		6m/s	

FAQ


Use with other DJI products

The A2 can be used with other DJI products such as iOSD Mark II, Z15, S800 EVO and 2.4G Data Link(iPAD Ground Station function), H3-2D (firmware coming soon), etc.

The following 2.4G Data Link connection diagram is the connection for your reference.

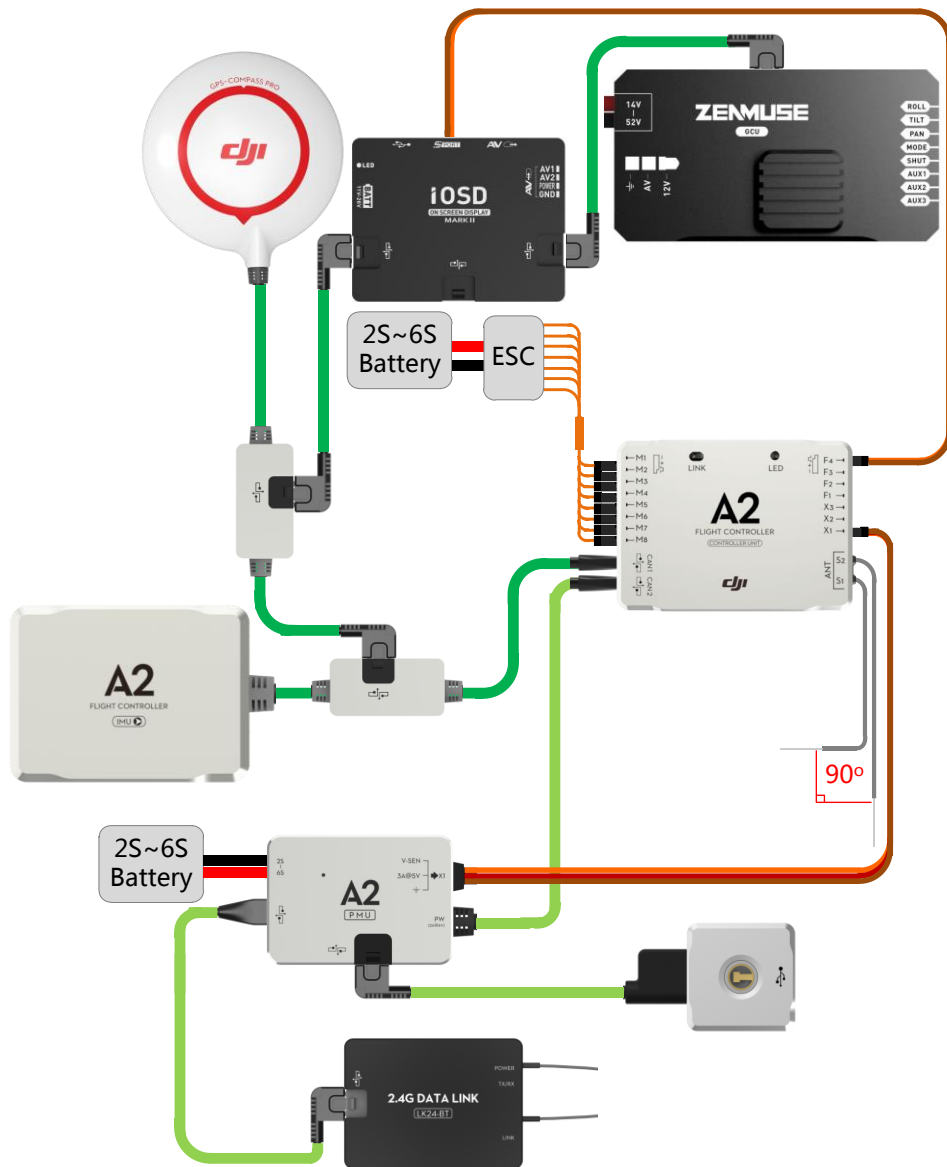


The following H3-2D connection diagram is the connection for your reference.

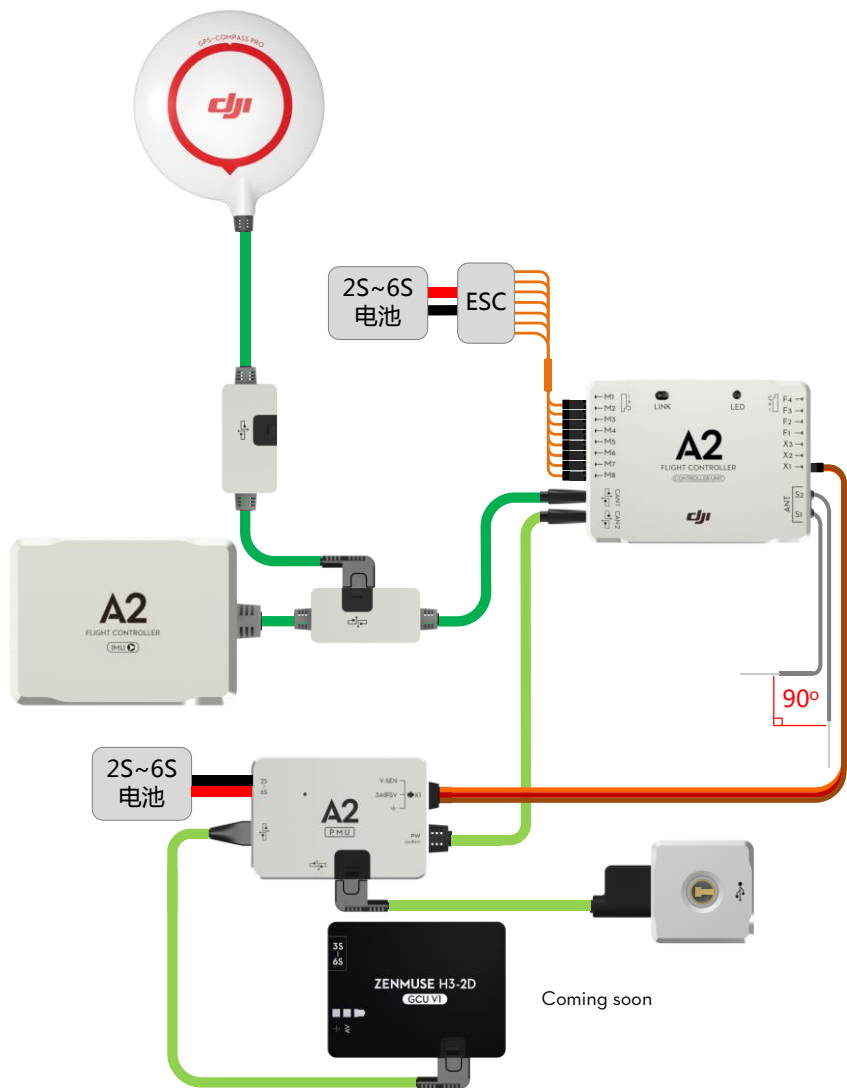


If the 2.4G Data Link and H3-2D are used at the same time, a CAN-HUB module is required.

Channel Mapping Instructions for PC Assistant Software

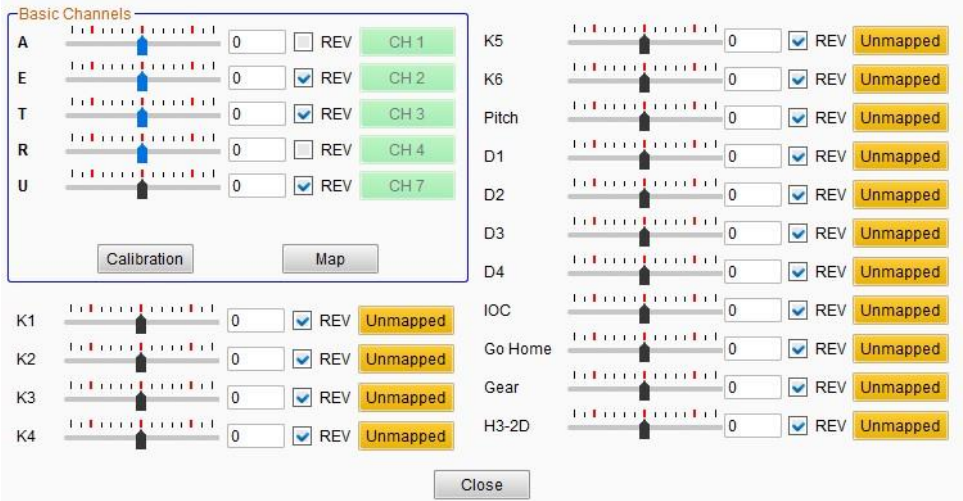

Basic Channel	Default Settings	Usage Descriptions
A	Roll Control of the Controller Unit, mapped to the Channel 1 of Receiver	During Assistant Software usage, please click the “Calibration” button, to calibrate the Transmitter sticks travel. During calibrating, make sure to operate strictly following the prompts; otherwise may lead to calibration failure. Click the “Map” button, then you can re-do mapping for A/E/T/R/U.
E	Pitch Control of the Controller Unit, mapped to the Channel2 of Receiver	
T	Throttle Control of the Controller Unit, mapped to the Channel3 of Receiver	
R	Yaw Control of the Controller Unit, mapped to the Channel4 of Receiver	
U	Control Mode Switch of the Controller Unit, mapped to the Channel7 of Receiver	
Others	Default Settings	Usage Descriptions
K1-K6	Remote Gains Adjustment of the Controller Unit, unmapped.	Click “Unmapped” button to map K1-K6 to the channels of Receiver.
Pitch	Gimbal Pitch Control of the Controller Unit, unmapped.	Click “Unmapped” button to map Pitch to a Receiver channel for the gimbal servo control.
D1-D4	Direct Channels (The corresponding ports are F1-F4 on the Controller Unit) of Controller Unit, unmapped.	Click “Unmapped” button to map D1-D4 to the Receiver channels. If you enable the Gimbal functions in Assistant Software, then the F3/F2 are used for gimbal control; even

		<p>D3/D2 are mapped to channels of Receiver, and the signals from the mapped Receiver channels will be ignored.</p> <p>You can use F4 for switching the video channel of iOSD Mark II, then map D4 to a Receiver channel.</p>
IOC	IOC function of the Controller Unit, unmapped.	Click “Unmapped” button to map IOC to a Receiver channel. It is recommended to use a 3-position switch channel.
Go Home	One-Key Go Home function of the Controller Unit, unmapped.	Click “Unmapped” button to map Go Home to the Receiver channel. It is recommended to use a 2-position switch channel.
Gear	Intelligent Gear function of the Controller Unit, unmapped.	If you enable the Gear function in Assistant Software, then the F1 is used for the gear control of S800 EVO landing.
H3-2D	H3-2D function of the Controller Unit, unmapped.	Click “Unmapped” button to map H3-2D to a Receiver channel. It is recommended to use a Knob switch channel, which is only used for H3-2D pitch control.
 The Pitch and the H3-2D channels can be used at the same time. The Pitch is for the pitch control of servo gimbal, and the H3-2D is for the pitch control of H3-2D gimbal		

Recommended Mapping for Futaba Transmitter (Mode 2) User

Controller Unit Channel	Receiver Channel	Recommended Transmitter Switch
A	Channe 1 (AIL)	Joystick J1
E	Channe 2 (ELE)	Joystick J2
T	Channe 3 (THR)	Joystick J3
R	Channe 4 (RUD)	Joystick J4
U	Channe 7 (AUX5)	3-Position switch, e.g. SG
K1-K6	Channe 5 (GEAR)	Knob switch, e.g. LD, RD
Pitch	Channe 6 (Vpp)	Knob switch, e.g. LD, RD
D1/D3/D2	----	----
D4	Channe 9 (AUX1)	2-Position switch, e.g. SF

IOC	Channe 10 (AUX2)	3-Position switch, e.g. SG
Go Home	Channe 11 (AUX3)	2-Position switch with spring back function, e.g. SH
Gear	Channe 8 (AUX4)	2-Position switch, e.g. SF
H3-2D	Channe 12 (AUX5)	Knob switch, e.g. LD、 RD

Settings of gain values for Your Reference

To set the value of basic gain and attitude gain you can refer to the following diagram. These values are only for reference and may vary in practice.

Aircraft	Configuration Information					Basic			Attitude		
	Motor	ESC	Propeller	Battery	Weight	Pitch	Roll	Yaw	Pitch	Roll	Vertical
F450	DJI-2212	DJI-30A	DJI-8 Inch	3S-2200	890 g	150	150	135	150	150	140
F550	DJI-2212	DJI-30A	DJI-8 Inch	4S-3300	1530 g	170	170	150	160	160	150
S800 EVO+Z15	DJI-4114	DJI-40A	DJI-15Inch	6S-15000	7000g	140	140	130	140	140	130

The Transmitter setup of FUTABA

Please configure the Frequency item on your Transmitter adhere to the table below. (The names of FASST modes here are based to the Transmitter FUTABA T8FG, please ensure to select the most similar mode as the names differs for different Transmitters)

Transmitter type	AREA	FASST
FUTABA 18MZ	Default	FASST-MULTI\FASST-7CH
FUTABA 14MZ with TM-14	Default	MULT\7CH
FUTABA 14SG	FRANCE\GENERAL	FASST-MULTI\FASST-7CH
FUTABA 12Z 2.4G FASST with TM-14	Default	MULT\7CH
FUTABA 12FG 2.4G FASST with TM-14	Default	MULT\7CH
FUTABA 10CG or 10C with TM-10	Default	7CH
FUTABA 9C SUPER with TM-7 or TM-8	Default	7CH
FUTABA 8FG SUPER	FRANCE\GENERAL	MLT2\MULT\7CH
FUTABA 8FG	FRANCE\GENERAL	MULT/7CH
FUTABA 7C 2.4G	Default	Default
FUTABA 6EX FASST	Default	Default

Disclaimer

Please read this disclaimer carefully before using the product. By using this product, you hereby agree to this disclaimer and signify that you have read them fully.

THIS PRODUCT IS NOT SUITABLE FOR PEOPLE UNDER THE AGE OF 18.

A2 flight controller is designed for serious multi-rotor enthusiasts providing excellent self-leveling and altitude holding, which completely takes the stress out of flying RC multi-rotors for both professional and hobby applications. Despite the product having a built-in flight control system and our efforts in making the operation of the controller as safe as possible when the main power battery is connected, we strongly recommend users to remove all propellers when calibrating and setting parameters. Make sure all connections are good, and keep children and animals away during firmware upgrade, system calibration and parameter setup. DJI Innovations accepts no liability for damage(s) or injuries incurred directly or indirectly from the use of this product in the following conditions:

1. Damage(s) or injuries incurred when users are drunk, taking drugs, drug anesthesia, dizziness, fatigue, nausea and any other conditions no matter physically or mentally that could impair your ability.
2. Damage(s) or injuries caused by subjective intentional operations.
3. Any mental damage compensation caused by accident.
4. Failure to follow the guidance of the manual to assemble or operate.
5. Malfunctions caused by refit or replacement with non-DJI accessories and parts.
6. Damage(s) or injuries caused by using third party products or fake DJI products.
7. Damage(s) or injuries caused by mis-operation or subjective mis-judgment.
8. Damage(s) or injuries caused by mechanical failures due to erosion, aging.
9. Damage(s) or injuries caused by continued flying after low voltage protection alarm is triggered.
10. Damage(s) or injuries caused by knowingly flying the aircraft in abnormal condition (such as water, oil, soil, sand and other unknown material ingress into the aircraft or the assembly is not completed, the main components have obvious faults, obvious defect or missing accessories).
11. Damage(s) or injuries caused by flying in the following situations such as the aircraft in magnetic interference area, radio interference area, government regulated no-fly zones or the pilot is in backlight, blocked, fuzzy sight, and poor eyesight is not suitable for operating and other conditions not suitable for operating.
12. Damage(s) or injuries caused by using in bad weather, such as a rainy day or windy (more than moderate breeze), snow, hail, lightning, tornadoes, hurricanes etc.
13. Damage(s) or injuries caused when the aircraft is in the following situations: collision, fire, explosion, floods, tsunamis, subsidence, ice trapped, avalanche, debris flow, landslide, earthquake, etc.
14. Damage(s) or injuries caused by infringement such as any data, audio or video material recorded by the use of aircraft.
15. Damage(s) or injuries caused by the misuse of the battery, protection circuit, RC model and battery chargers.
16. Other losses that are not covered by the scope of DJI Innovations liability.

Trademark

DJI and A2 are registered trademarks of DJI Innovations. Names of product, brand, etc., appearing in this manual are trademarks or registered trademarks of their respective owner companies. This product and manual are copyrighted by DJI Innovations with all rights reserved. No part of this product or manual shall be reproduced in any form without the prior written consent or authorization of DJI Innovations. No patent liability is assumed with respect to the use of the product or information contained herein.